


	CAROLIFT 6000	CAROLIFT 6900
Maximum capacity	181 kg	181 kg
Adjustable height	Yes	Yes
Adjustable hoist arm length	Yes	Yes
Adjustable hoist head angle	Yes	Yes
Power rotation	Yes	Yes
Power lifting/lowering	Yes	Yes
Power telescoping hoist head	No	Yes, 15 cm
Foldable hoist head	Yes	No
Adjustable rotation up to 360 degrees	Yes	Yes

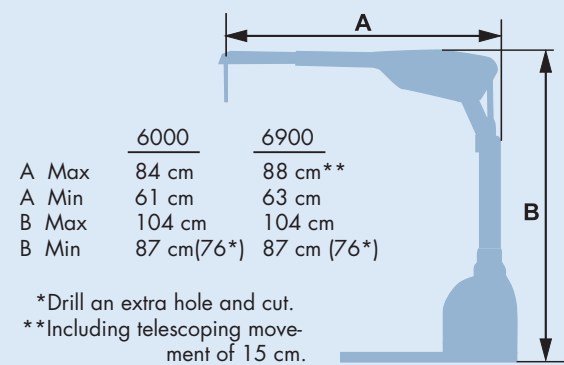

Carolift 6000 and 6900 are tested according to the American vehicle regulations FMVSS.

They also fulfil the EMC requirements (elektromagnetic compatibility) directives 2004/108/EC.

The hoists are CE marked.



CAROLIFT®

6000 and 6900

A wheelchair hoist designed to fit even in vehicles with a sloping or narrow rear door



For more
information
www.autoadapt.com



Autoadapt AB, Hedeforsvägen 6,
S-443 61 Stenkullen, Sweden
Tel: +46 (0)302 558 20 Fax: +46 (0)302 558 29
E mail: contact@autoadapt.se www.autoadapt.com

Autoadapt UK Ltd, Unit 4, Windsor Industrial Estate,
Rupert Street, Aston, B7 4PR Birmingham, UK
Phone: 0121 3335170 Fax: 0121 3596194
E mail: contact@autoadapt.co.uk www.autoadapt.co.uk



CAROLIFT® 6000 and 6900

● Can pick up a wheelchair from the side of the vehicle

The hoist arm of Carolift 6000/6900 has an off-set design (like two "elbows") which enables loading from the side of the vehicle. This means you can keep the wheelchair placed on the pavement thus not needing to descend to street level.



Carolift 6000 picks up a Carony Go wheel unit from the pavement.

● Lift capacity 181 kg

● Modularity

The height of the hoist pillar, as well as the length of the hoist arm, is easily adjusted to fit the specific Estate Wagon or MPV vehicle. In addition to this the hoist head can be angular adjusted to optimise the form of the rear door opening.

The hoist arm off-set feature provides an excellent installation in vehicles with an extra sloping rear door design.

The Carolift model 6900 has a telescoping hoist head to pass through narrow door openings or to bypass wide bumpers.



The Carolift 6000 has a lift capacity of 181 kg.

The Carolift 6900 (telescoping feature) has a lift capacity of 181 kg.



The power telescoping hoist head provides additional flexibility to bypass wide bumpers or to pass through narrow door openings.

● Foldable hoist head

The hoist head of Carolift 6900 is foldable when not in use and thereby leaving substantial room in the luggage compartment.



The Carolift 6000 is loading a Carony Go wheel unit in a Peugeot 406 with a sloping rear door design.

● Reliable and safe

The direct gear drive technology makes the hoist reliable and maintenance-free.

The hoist has a scratch resistant black textured finish.

The hoists are CE-marked and safety tested according to FMVSS and the installation is made with a stable modular mounting base using several fixing points.

The speed can be adjusted by the installer to suit the user needs.



Docking device

The docking devices are designed for different types of wheelchairs/scooters. These are ordered separately.

<p>4-belt docking device Power wheelchairs with seat 180 kg.</p>	<p>C-arm and T-gbar Scooters and power wheelchairs, 180 kg.</p>	<p>Claw and T-bar 180 kg. Scooters with removable seat</p>	<p>Carony docking device For the Carony wheel unit.</p>
---	--	---	--