


# INDEPENDENT DRIVING

## LEFT FOOT ACCELERATOR DSSA 197

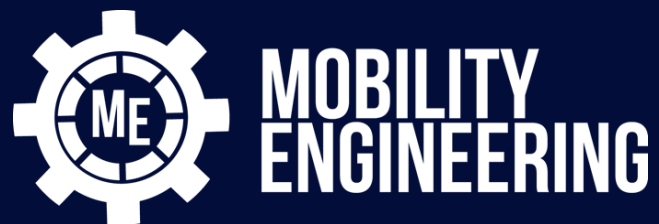

# INDEPENDENT DRIVING

## LEFT FOOT ACCELERATOR DSSA 197



The **Left Foot Accelerator** was developed for those with who do not have use or full function of their right leg as an alternative choice to hand controls.






The quick release accelerator pedal can be installed in cars which are both automatic and manual transmission. Users who lack mobility in their right leg benefit by being able to control the brake and accelerator pedals with their left foot only.



A small pedal guard sits in front of the factory pedal to ensure the user avoids inadvertent acceleration while using this product. The system quickly anchorages to the floor making it easy to remove when it is not in use.

When the left foot accelerator is not in use, it can be easily re-moved by unscrewing a wing nut that fixes the pedal to the support bracket.




### FEATURES

-  Universal design
-  OEM Pedal Guard ensuring protection for the driver
-  Easily removed when not in use

### SPECIFICATIONS

-  Anchored to vehicle floor
-  Pedal guard prevents use of original pedal

### Benefits

-  Provides vehicle independence
-  Allows operation of the accelerator with the left leg
-  Wider range of installation applicability's



This product comes with a 36 month warranty for Australian / New Zealand users.

4/45 Salisbury Road  
ASQUITH NSW 2077  
(02) 9482 4572



[www.mobilityengineering.com.au](http://www.mobilityengineering.com.au)

[sales@mobilityengineering.com.au](mailto:sales@mobilityengineering.com.au)

