


INDEPENDENT DRIVING

LEFT FOOT ACCELERATOR DS-SE 10 EL

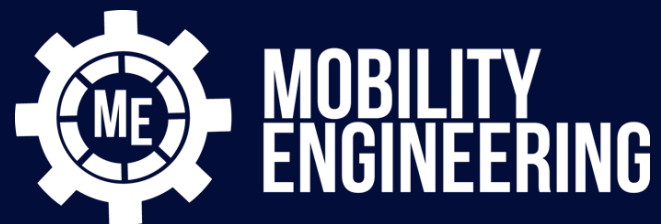

INDEPENDENT DRIVING

LEFT FOOT ACCELERATOR DS-SE 10 EL



The **Left Foot Accelerator** was developed for those with who do not have use or full function of their right leg as an alternative choice to hand controls.






The accelerator pedal DS-SE10EL can be installed in cars with electronic accelerator pedal and automatic gear. Thanks to a LED pushbutton placed in a comfortable position on the dashboard, at every start the driver will be able to choose between the original accelerator and the one on the left. For security reasons, at each start the original accelerator pedal switches on first.




The LED button flashes for 10 seconds and then, if not pressed, remains red. To use the left foot accelerator instead, all the driver needs to do is push the flashing button within the first 10 seconds. Once the throttle control to the left is activated, the LED will turn green and remain so. Once the desired pedal has been selected, it will be no longer possible to modify the choice without stopping and restarting the vehicle. When not in use, the pedal on the left can be easily removed, by simply unscrewing the wing bolt that fixes it to the support. This product has been submitted to EMC tests.





FEATURES

-  Universal design
-  OEM Pedal Guard ensuring protection for the driver
-  Easily removed when not in use

Benefits

-  Provides vehicle independence
-  Allows operation of the accelerator with the left leg
-  Wider range of installation applicability's

SPECIFICATIONS

-  Anchored to vehicle floor
-  Pedal guard prevents use of original pedal



This product comes with a 36 month warranty for Australian / New Zealand users.

4/45 Salisbury Road
ASQUITH NSW 2077
(02) 9482 4572



www.mobilityengineering.com.au

sales@mobilityengineering.com.au

