



INDEPENDENT DRIVING FLIP-UP LEFT FOOT ACCELERATOR



INDEPENDENT DRIVING FLIP-UP LEFT FOOT ACCELERATOR

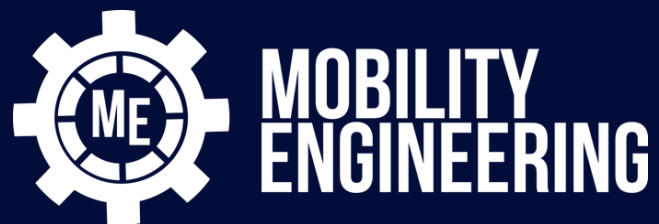

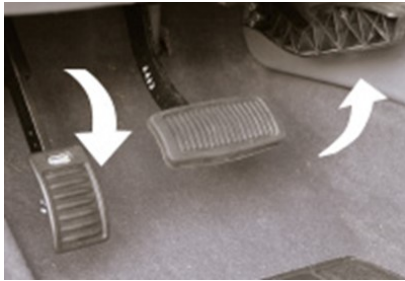


The Flip-Up Left Foot Accelerator pedal can be installed into cars which have both a automatic transmission and have sufficient space between the footrest and brake pedal.




At the time of installation, the original accelerator pedal and the left foot accelerator pedal are both equipped with a hinge to allow the pedals to be flipped into and out of position.


The **Flip-Up Left Foot Accelerator** is used by gently pushing the pedal into place, while the unused pedal is flipped upwards. This system ensures there is no accidental acceleration with the original pedal when the left foot accelerator is in use and removes the necessary installation of a pedal guard.

FEATURES




-  Universal design
-  Discrete system with a convenient fit
-  Easily switch between the 2 accelerator pedals

BENEFITS

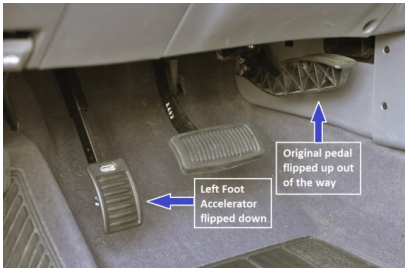-  Provides vehicle independence
-  Allows operation of the accelerator with the left leg
-  Wide range of installation applicability's



SPECIFICATIONS

-  Available for LHD installation
-  Flip Up function
-  Option of a 'Kick-Down' switch available

