


**INDEPENDENT DRIVING**

**VEIGEL ELECTRONIC & MECHANICAL**

**LEFT FOOT ACCELERATOR**

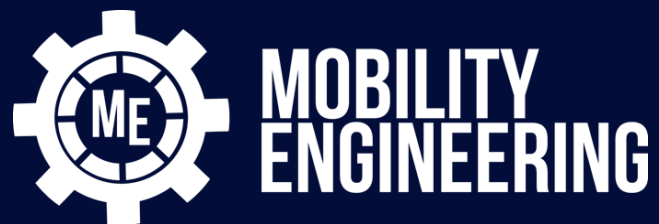

# INDEPENDENT DRIVING

## VEIGEL ELECTRONIC & MECHANICAL

### LEFT FOOT ACCELERATOR






**Veigel Left Foot Accelerators** can allow you to use your left leg to accelerate the vehicle and is available in both Electric and Mechanical options. By transferring the accelerator to the left side of the brake pedal, this allows users with limited use of their right foot to still operate the vehicle.

**Electronic Left Foot Accelerator** - Ideal for vehicles with floor mounted pedals, people with fused knees and foot joints or where there is a frequent change of drivers. This design simply switches between the two accelerators, so when one is in use the other is deactivated and will not operate until it is turned back on. This device connects the left foot accelerator to the original pedal, using electronics which read the vehicles original accelerator signal and transfers this over to the left pedal.




**Mechanical Left Foot Accelerator** – this will convert the accelerator pedal of the vehicle to the left side using a mechanical connection. The original pedal is covered with a guard so it cannot be accidentally pressed while driving and if someone else is driving the left foot accelerator can be easily removed using your hands.

#### FEATURES

-  Universal fitting to suit all vehicle models
-  Quick-release design allows for easy changeover between left and right pedals
-  Can only be used with automatic vehicles





#### SPECIFICATIONS

-  Electric and Mechanical options
-  Single button operation for the Electric option
-  Vehicle specific fitting available



#### BENEFITS

-  Independence to use your own vehicle
-  Retains all the vehicles factory safety features and functions