


# INDEPENDENT DRIVING CAROSPEED MENOX



# INDEPENDENT DRIVING CAROSPEED MENOX

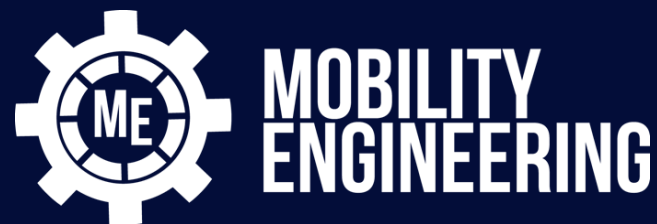

Hand Controls for accelerator and brake.








The **Carospeed Menox** is a floor mounted hand control, installed along the vehicles transmission tunnel, that is designed to be used with your left hand to operate the accelerator and brake in the vehicle. You activate the accelerator by pulling the lever towards yourself, to brake you push the lever forward towards the dashboard.

Being installed on the left-hand side of the driver's area gives the driver the natural feel of driving keeping their right hand on the steering wheel. The other advantage with its position inside of the vehicle is that it does not impeded on the drivers seating position or the steering wheel, meaning the driver can utilise more of the vehicles original features and spacing.

The **Carospeed Menox** comes with a hill holder function as standard. The hill holder function acts like a park brake, leaving your hands free to change gears or adjust other functions in the vehicle.





## FEATURES

-  Universal fitting design made to suit most vehicles
-  Ergonomic handle design with various styling options to match the vehicles interior
-  Hill holder function as standard
-  Indicators, headlights, windscreen wipers and horn can be wired into the multi-grip handle
-  Optional cruise control operation




## BENEFITS

-  Acceleration design reduces the effort involved to drive the vehicle
-  Provides vehicle independence



4/45 Salisbury Road  
ASQUITH NSW 2077  
(02) 9482 4572

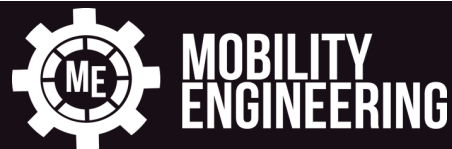

[www.mobilityengineering.com.au](http://www.mobilityengineering.com.au)

[sales@mobilityengineering.com.au](mailto:sales@mobilityengineering.com.au)