


INDEPENDENT DRIVING

CT12 SLIDER HAND CONTROL

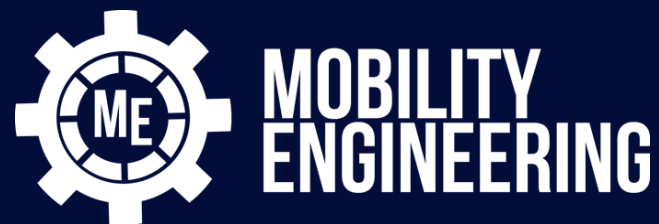

INDEPENDENT DRIVING

CT12 SLIDER HAND CONTROL






The **CT12 Slider Hand Control** by Kivi transfers the controls of the brake and accelerator from the pedals to the steering wheel. This allows anyone who has partial or even no use of their lower limbs to drive a car independently, it can even be operated with only partial use of the upper limbs.



CT12 consist of a brake lever with a horizontal push and a slider; by pushing the lever to the dashboard to brake, while moving the slider outwards with the thumb to accelerate. The **CT12** hand control is easily to install and to operate, plus it is fitted with a safety mechanism that cuts the accelerator the moment the brakes are activated; meaning there will be no accidental stops or starts! Depending on vehicle model the knee airbag will not be obstructed and the vehicle can still be safely operated by any driver.

If you need assistance driving without the use of your lower limbs and without limited the functionality of your vehicle, the **CT12 slider hand control** unit may be the solution for you.

FEATURES

-  Easy brake and accelerator function.
-  Does not block airbag opening or any driver controls.
-  Can be made to include vehicle auxiliary functions.

BENEFITS

-  Vehicle can still be operated by anyone.
-  User maintains complete vehicle independence.

